

Hive Active Heating

Hive Thermostat Mini
user guide



CHERRYMOUNT
COTTAGE

A decorative illustration of a cherry blossom branch with pink flowers and buds, positioned between the text 'CHERRYMOUNT' and 'COTTAGE'.




The thermostat / controller is located in the hall just outside the kitchen door. This controls both the heating and the hot water.



The receiver is located in the utility room and connects the controller to the actual boiler. Green lights at the bottom indicate the boiler is currently operating for hot water, central heating or both. In the event of difficulties with the thermostat / controller these buttons can be used to manually switch the boiler.


Welcome to Hive Active Heating

Hive Active Heating is the clever way to control your heating, and if you have a hot water tank, your hot water too. This guide tells you everything you need to know.

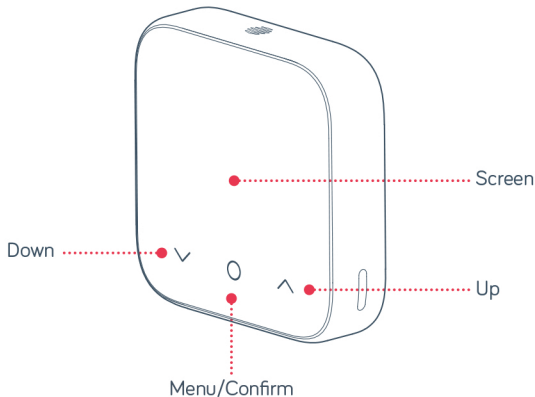

Getting started

How to change the temperature:






- 1 Tap the up arrow to increase the target temperature
- 2 Your heating will come on if the target temperature is above the actual temperature (you'll see  when the heating is on)
- 3 Tap the down arrow to lower the target temperature



Heating

How to change mode:


Your thermostat has 4 heating modes **Schedule**, **Manual**, **Boost** and **Off**

- 1 Tap any icon to wake up the thermostat
- 2 Once the screen turns on press the Menu/Confirm  icon
- 3 Here you'll see the different modes: Schedule, Manual, Boost and Off (if you have Heating & Hot Water, you will first be presented with a screen to Choose Function Heating Hot Water. Use  or  to select the function and tap on Menu/Confirm  to select)
- 4 Select the mode you want by using the up or down arrow and tapping the Menu/Confirm  icon to confirm selection

Schedule turns your heating on and off when you want it to and can be more energy efficient

Manual makes sure your home maintains a constant temperature








Boost increases your heating for a set amount of time chosen

Off leaves your heating in Frost Protection - so your heating will only come on if your home drops below 7°C. You'll see  on the screen to remind you that Frost Protection is enabled.



Hot water

How to turn your hot water on or off:

- 1 Wake your thermostat by tapping any of the icons on the screen
- 2 Once the screen turns on press the Menu/Confirm  icon
- 3 Use the Up  or Down  icon to choose between Heating & Hot Water function, then tap Menu/Confirm  to select Hot Water
- 4 Choose between **On**, **Schedule**, **Boost** or **Off** using the Up  or Down  icons
- 5 Tap Menu/Confirm  to confirm



Hot tip: The pre-programmed schedule will normally ensure sufficient hot water reserves throughout the day. Use the Boost feature should hot water run low for any reason.










How to boost your heating or hot water for a short time:

You can also boost directly from your Hive Mini device for a duration ranging from 15 minutes up to 6 hours.

Once the set boost duration has finished, your thermostat will resume its previous setting of either manual set temperature, schedule or off in frost protection mode.



Icons you might see on your thermostat

- | | | |
|----|---------------------------------|---|
| 1 | Hot Water mode on |  |
| 2 | Heating mode on |  |
| 3 | Actual temperature | Actual |
| 4 | Down button |  |
| 5 | Menu button |  |
| 6 | Up button |  |
| 7 | Frost protection |  |
| 8 | Target temperature | Target |
| 9 | Boost mode on |  |
| 10 | Boosting to target for duration | Boost 22° 01:24 |
| 11 | Boosting has ended | Boosting stopped |

